

****Steam Hat Press Machine****

****User Manual****

**1. Important Safety Instructions**

****WARNING:****

- Always place the appliance on a ****flat, stable, heat-resistant surface**** away from edges.
- ****Never**** touch the ****heating plate**** or ****steam nozzle**** during operation or cooling (wait 15 mins after use).
- ****Only use distilled water**** to prevent mineral buildup. Do not add chemicals or perfumes.
- ****Unplug immediately**** after use.
- ****Not suitable**** for:
 - Hats with plastic, wax, or flammable decorations.
 - Children's hats with loose stitching or glued parts.

**2. Product Overview**

![Illustration: Labeled parts diagram]

- ****A.**** Heating plate (stainless steel)
- ****B.**** Steam trigger button
- ****C.**** Adjustable hat stand
- ****D.**** Water tank
- ****E.**** Power cord (1m)
- ****F.**** Temperature control dial (Low/High)

**3. Step-by-Step Instructions**

**Preparation:**

1. ****Fill the tank****: Open the cap, pour distilled water up to the "MAX" line. Close tightly.
2. ****Preheat****: Plug in, turn the dial to ****High**** (wool/felt) or ****Low**** (straw/cotton). The ****ready light**** (green) will illuminate in ****2 minutes****.

**Steam Pressing:**

1. ****Position the hat****: Secure it on the stand, stretching the target area smoothly.
2. ****Steam****: Hold the steam button for ****1-second bursts**** while moving the nozzle ****5cm away**** from the fabric.
3. ****Reshape****: Use the attached ****bristle brush**** to smooth fibers immediately after steaming.

**Dry Pressing (for stiff brims/creases):**

1. Switch to **DRY** mode (no steam).
2. Press the hat section onto the plate for **5 seconds**. Release and check results.

4. Care & Maintenance

Daily:

- Wipe the plate with a **damp microfiber cloth** after cooling.
- Empty the water tank to prevent mold.

Monthly:

- Descale: Mix **1 part white vinegar + 1 part water**, run steam for 2 mins, then rinse with clean water.

⚠ **Never** immerse the unit in water or use abrasive cleaners.

5. Troubleshooting Guide

| **Issue** | **Quick Fix** |

|-----|-----|

| **Weak steam** | Check water level; clean nozzles with a pin. |

| **Water leaks** | Ensure the tank cap is fully twisted shut. |

| **Plate not heating** | Confirm the power cord is fully inserted. |

| **Unusual smell** | Use distilled water only; descale immediately. |
